TRAX
Ceiling Shower Rod.com
L-Trax
Hardware and Instructions

Connector

End Cap

Included Items:

- Two (or Three) Sections of Track, one with 90° corner
- 1 Connector
- 2 End Caps
- 7 Drywall ¼" Anchors
- 7 #10 x 1 ½" Screws
- 18 Carriers with Hooks

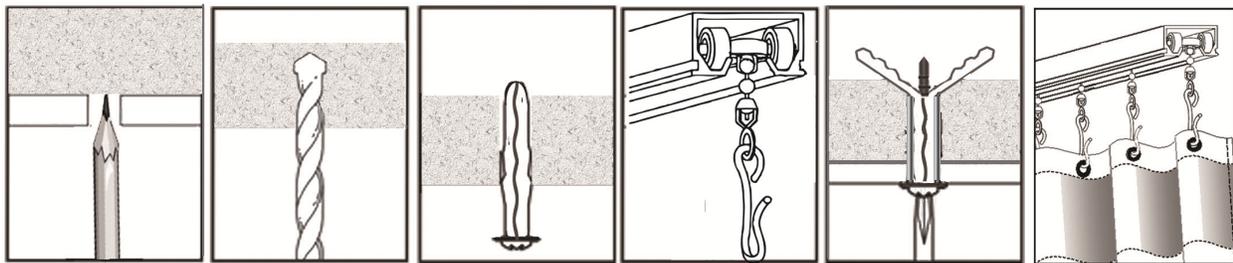## Recommended Tools:

SKIL

Philips Screwdriver

Drill

Hammer

Tape Measure

⅛" ¼" Drill Bits

Installation:

1. The L-shaped track is installed on the ceiling, aligning the track as desired. Slip the sections of track together at the Connector and hold to ceiling to see that it fits as desired. (The End Cap may be on the wrong leg of L section for your application. If so, remove and place on the end of other leg.) If the track is longer than the distance available, the ends can be shortened using a hacksaw. On the shortened ends, using the End Caps as a guide, drill new $^7/_{32}$" screw holes.

2. Hold the track to the ceiling and mark the seven holes on the ceiling. Take the track down and drill a 1/8" pilot hole at the marks for the drywall anchor and screw. If a drill hole hits a stud, no drywall anchor is needed and the mounting screws can be screwed directly into the stud at the pilot hole. In holes where you do not hit a stud, drill a ¼" hole through the drywall; insert a drywall anchor into the ¼" hole, tapping it in lightly with a hammer until it is flush with the ceiling.

3. Before attaching the track, insert the Carriers/Hooks into the track. Make sure to insert the number of Carriers to match the number of grommets in the curtain. (Note: there are probably a few extra Carriers included in the package.)

4. With End Caps and Connector in place, attach the track at the mounting holes with #10 x 1½" screws Start with the center screw on each section; then add the screws at the Connector and finally add the screws at the End Caps.

5. Attach the curtain to the Carriers/Hooks.

Picture Installation:

| Using Track as Pattern Mark Pilot Holes on Ceiling | Drill ⅛" Pilot Hole in Drywall; If No Stud, Drill ¼" Hole | Insert Drywall Anchors in Drywall if No Stud | Insert in Track same # of Carriers as Grommets | Attach Track to Ceiling at Mounting Holes | Hang Shower Curtain and Enjoy Your New L-Trax |